



# Export IFC from Advanced Steel

1. Download the IFC viewer from <http://www.ifcbrowser.com/>.

2. To export an Advance Steel model to an IFC file: on the ribbon, select **Export & Import > Exchange formats > (Export IFC)**.

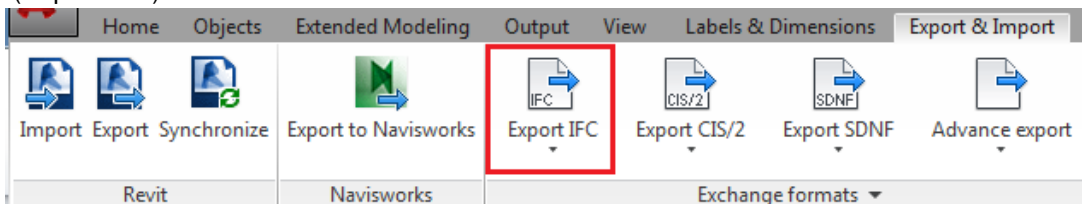

3.

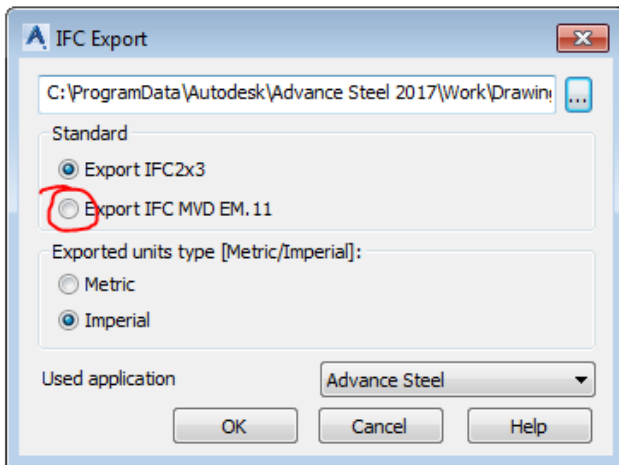

4. To view the IFC model in the IFC viewer: from the main menu, select **File > Open** and select the IFC file.

It is possible to rotate, zoom, etc.