



## Tekla Plugin

To install the Tekla plugin just double click on the Tsep file installer AGTPlugin2016+\_3.6.tsep

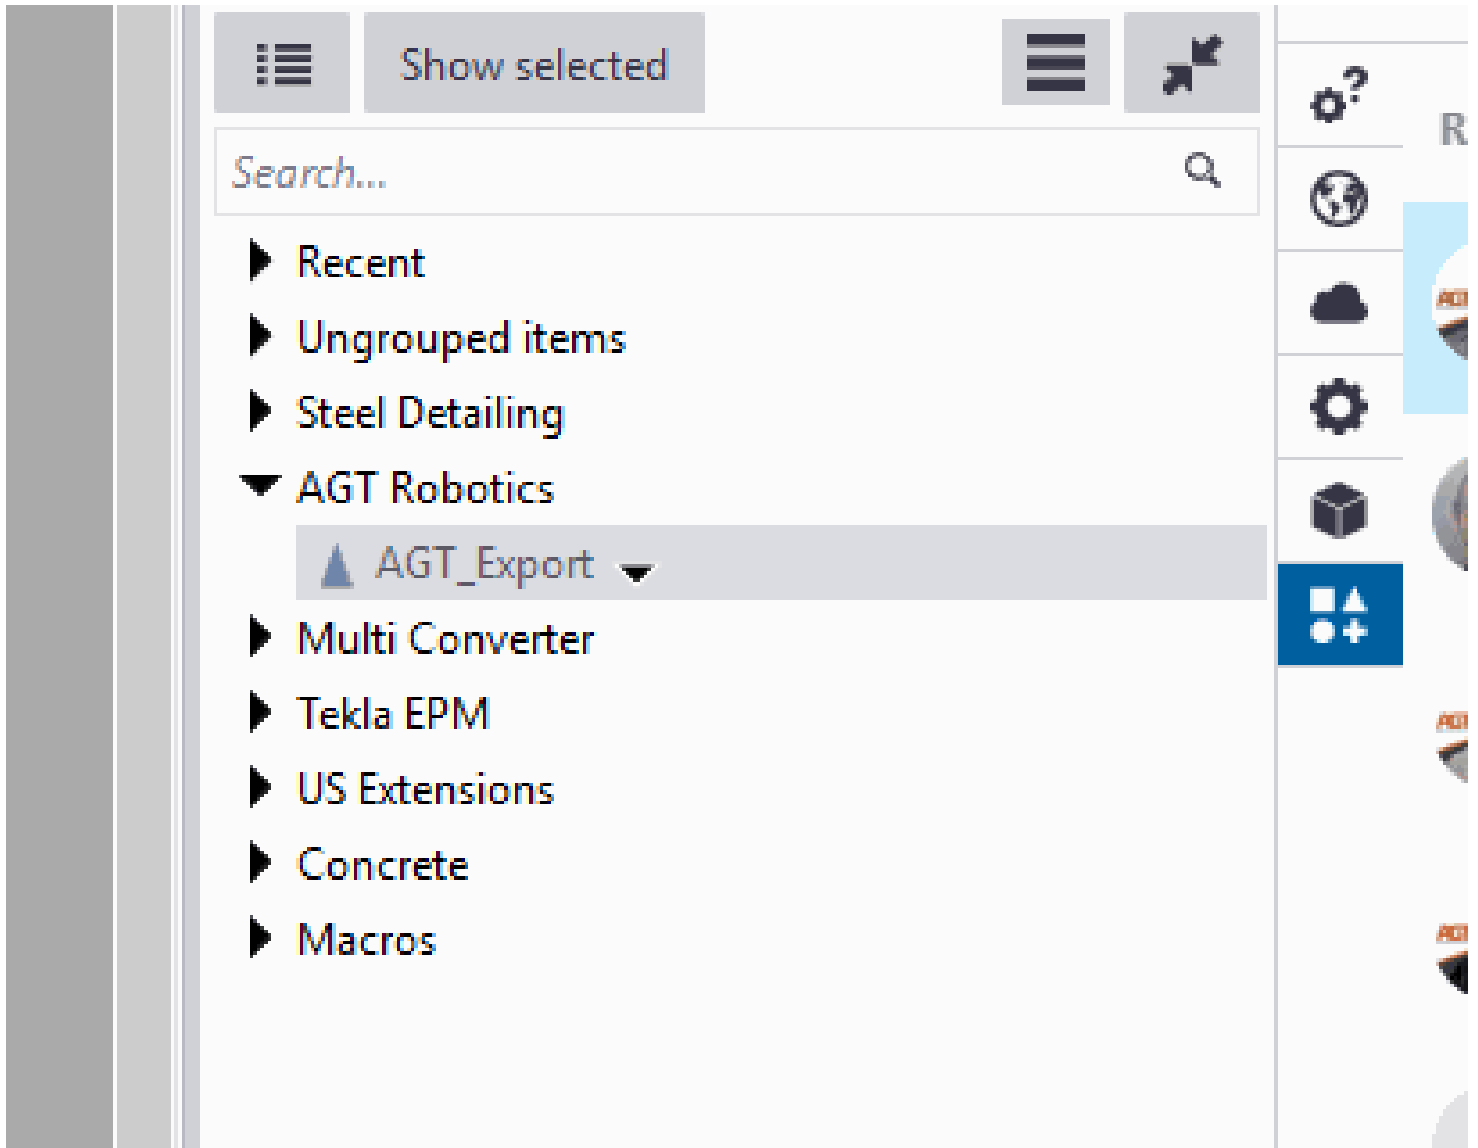

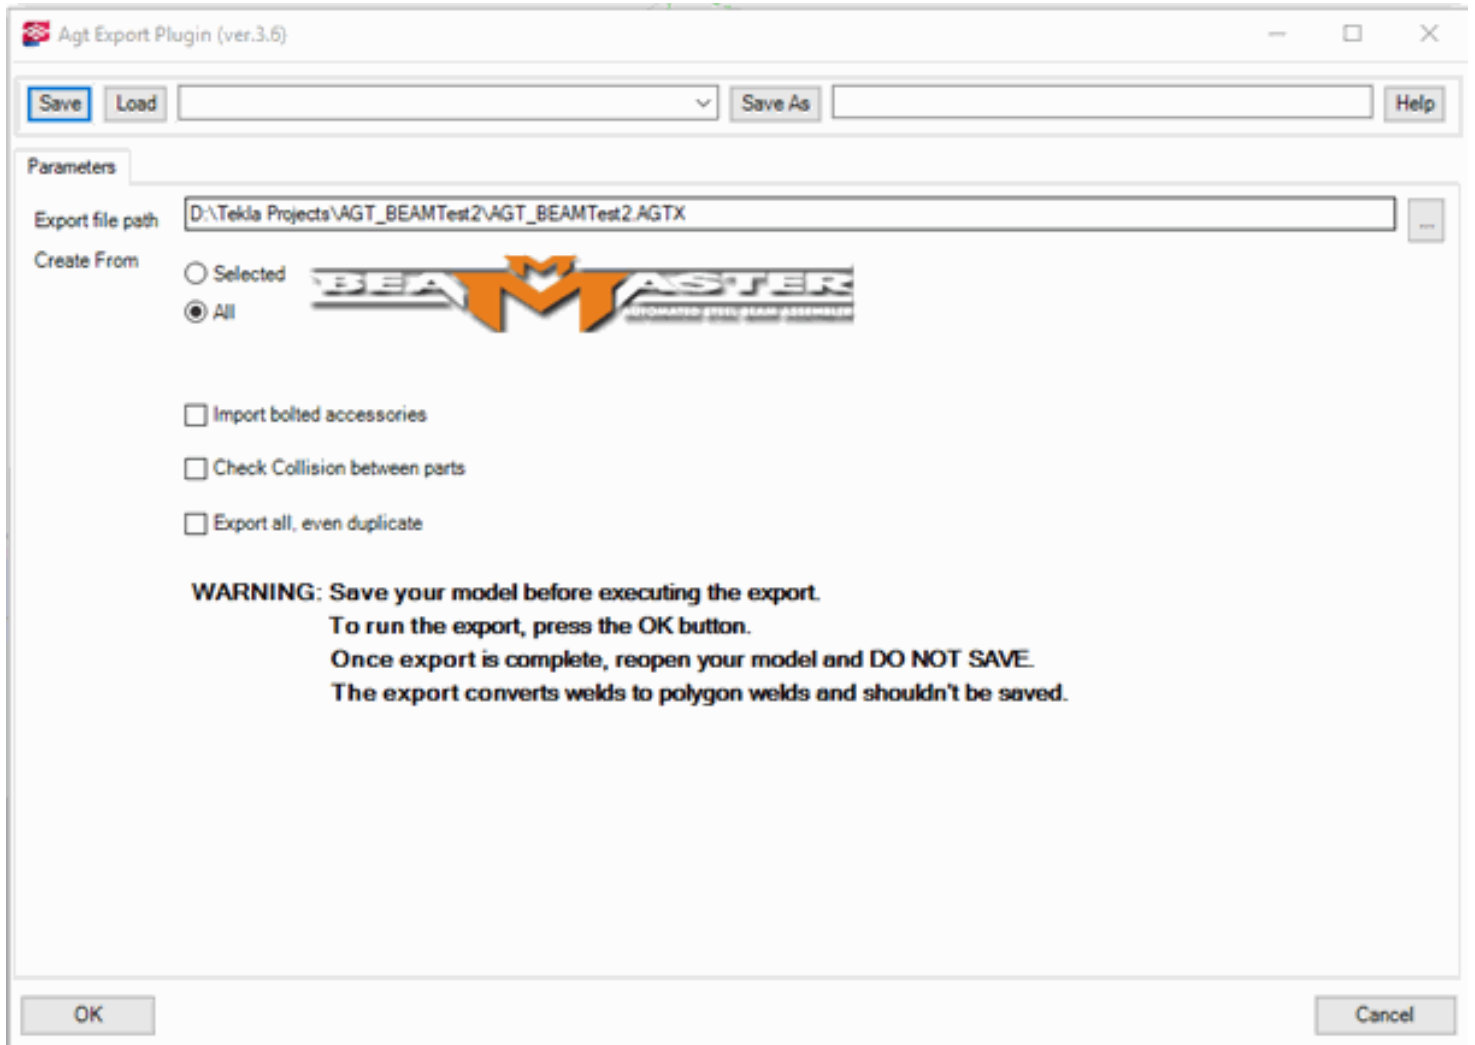

To set the #BM\_WeldPosAndSize in the weld:

